


Placing Hot Work Permits

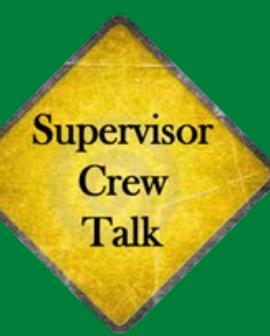

Once filled out and approved, hot work permits should be displayed in a safe, visible, and easily accessible location near the hot work.



Clearly visible from multiple angles
In a safe, accessible area
In the hot work area, but a safe distance away




Too close to the hot work
Not clearly visible
Unsafe to approach

Never place a hot work permit behind removed guarding that requires a lockout to access.



The top portion of the permit should be hung in the area where the hot work will be performed.

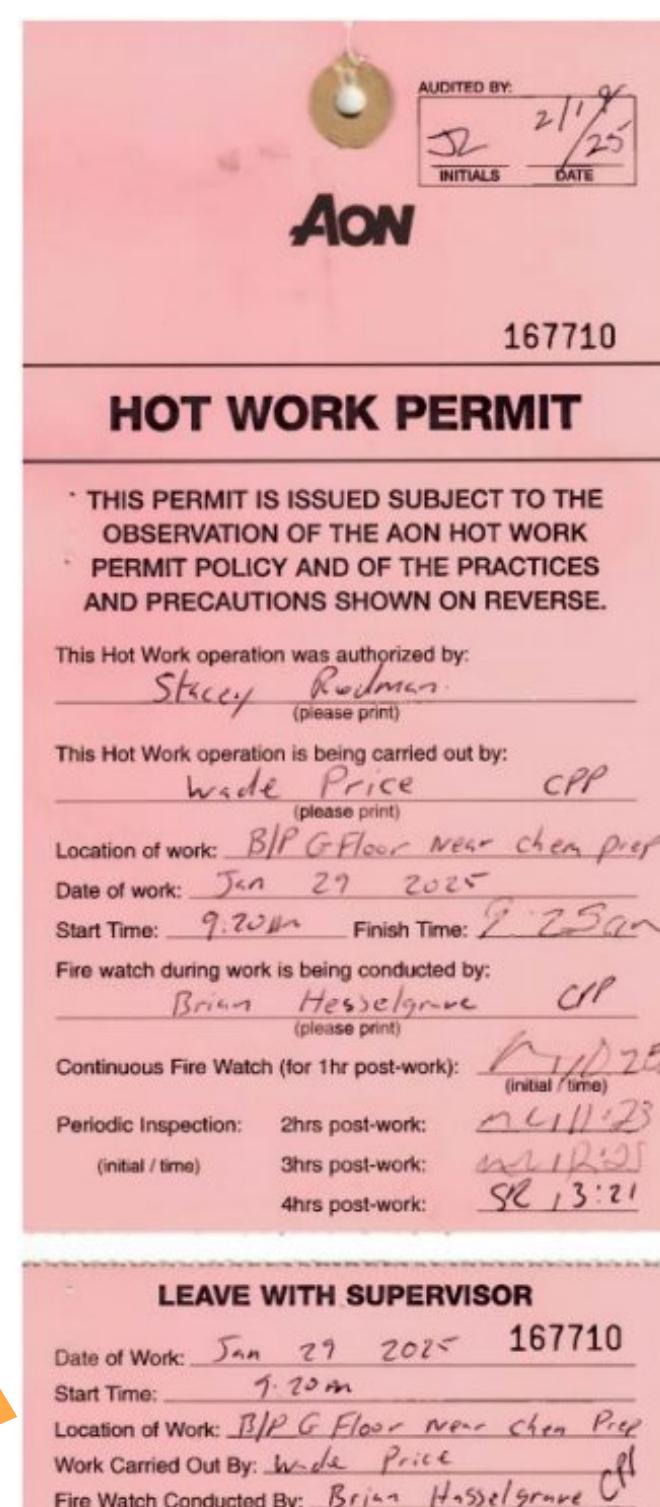

The smaller, bottom portion of the permit should be hung in its designated area where Fire Patrol Personnel



The permits will remain in the areas until the fire patrol has made a 2, 3, and 4 hour post-work inspection. Once the 4 hour inspection is finished, they will remove the permit, pair the top/bottom pieces together and turn it in.

"Safety is a Core Value and Business Priority"



West Fraser